



WLED IP65 Waterproof Controller User Instruction

GL-C-012WL

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

 **(210)-290-8493**

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

 **(817)-576-4113**

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

 **(469)-372-0795**

Product Parameter

Model No.: GL-C-012WL

Input Voltage: DC 5~24V

Input Current: 10A Max

Wireless Communication: WiFi



Waterproof Rating: IP65

Working Temperature: -20°C~45°C


Wire Size: 300mm

Controller Size: 16x38x151mm

Product Images

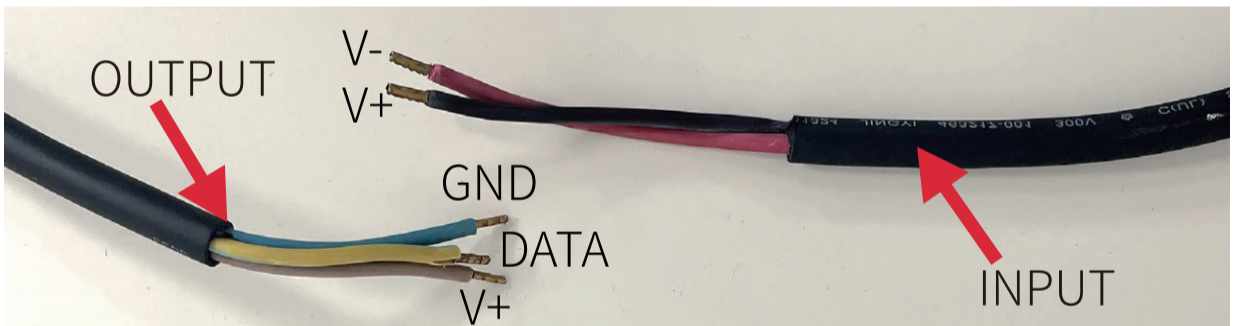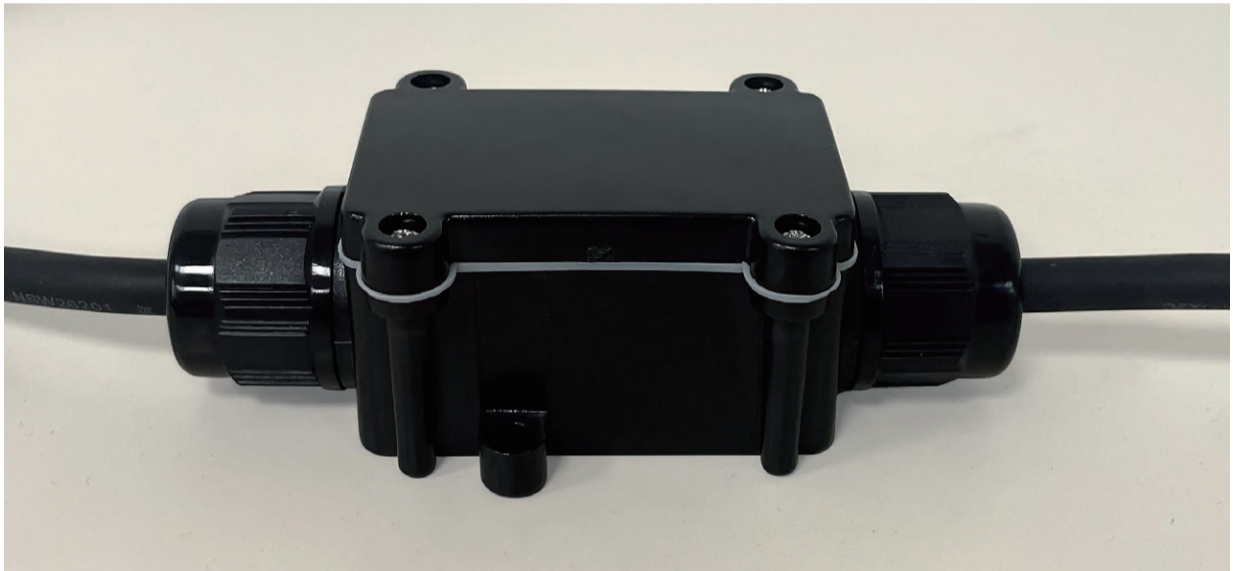

APP Download Method

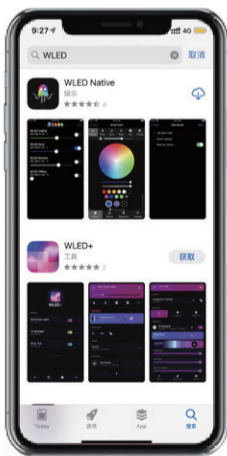

IOS

Search for and download **WLED Native** in the App Store.

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

☎ (210)-290-8493

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

☎ (817)-576-4113


RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

☎ (469)-372-0795

Android

Search for and download **WLED Native** in the Google Play Store.

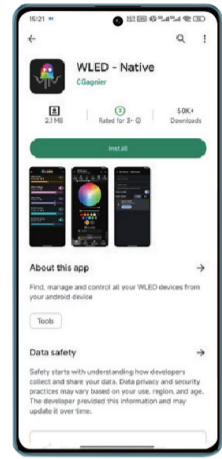


APP Configuration Steps

1. Power on the WLED controller.
2. Open the phone settings and enter WiFi settings, find "WLED-AP" and connect to it with the password "wled1234".



3. After successful connection, it will automatically jump to the WLED page (or enter the website 4.3.2.1 in the browser to enter the WLED page).

4. Click "WIFI SETTINGS", set the WiFi account and password, and then click "Save & Connect" at the top of the screen to save.

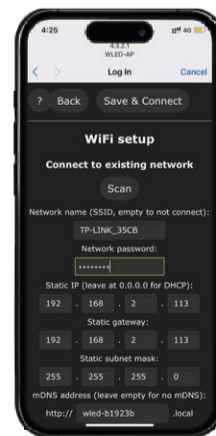

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(817)-576-4113

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795

5. Keep both your phone and the WLED controller connected to the same Wi-Fi network. Then, open the WLED-Native APP, and the WLED controller will be displayed in the list.



note:

1. After the WLED controller disconnects from the router, the chip will restart and return to the preset state (you can find the hotspot "WLED-AP" in your phone's WiFi settings).
2. If the WLED controller is not displayed or cannot be found in the APP, you can open a browser, enter the IP address of the WLED controller, and use the web interface for control (To find the controller's IP address: Connect to the Wi-Fi, locate the router's or controller's web address (usually found at the bottom of the router or on the controller itself), enter this address in the browser, and then you can view the controller's IP address in the router's backend interface).

LED Strip Configuration

Enter into the WLED control page and click on the "Config" button in the upper right corner. Then, select "LED Preferences" and navigate to "Hardware setup" to configure the LED strip information.



Description of Button Functions

Function button(GPIO17):

1. Short press: Power on/off.
2. Long press for 1 second: Switch colors.
3. Long press for 10 seconds: Reset the WLED controller and activate the WLED-AP hotspot.



Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(817)-576-4113

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795


Reset to Factory Settings

1. Button Reset

Long press the "Function" button for 10 seconds.

2. APP Reset

Enter into the WLED control page and click on the top right corner "Config". Click on "Security & Updates" at the bottom, and then scroll down to find "Factory reset" and check the box. Click "Save" to reset the controller.

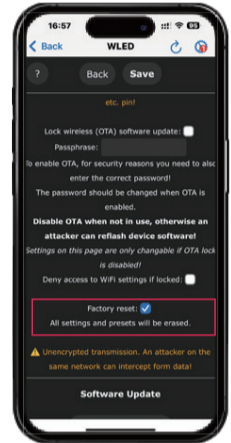

Supported Chips

WS2811、WS2811F、WS2812B、WS2814A、SK6812、WS2805
SM16703、SM16703SP3、FL19038、FW1935、FL19038, etc.

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

☎ (210)-290-8493

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

☎ (817)-576-4113

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

☎ (469)-372-0795

Troubleshooting and Solution

Number	Symptoms	Solution
1	Indicator light is not on	Check whether the input power connection is correct
2	APP shows "offline"	<ol style="list-style-type: none"> 1. Check if the phone is on the same network as the controller. 2. Check if the controller is out of the range of the WIFI connection, causing unstable connection. 3. Turn off and on the controller to retry.
3	APP is connected, but the light strip is not controllable	<ol style="list-style-type: none"> 1. Check if the power supply is working properly. 2. Check if the power supply voltage matches the light strip. 3. Check if the input power connection is correct. 4. Check if the light strip connection is correct. 5. Check if the GPIO settings in the APP are correct. 6. Check if the light strip IC model in the APP is set correctly.
4	The brightness of the light strip is low, and the front and back colors are significantly different	<ol style="list-style-type: none"> 1. Check if the power supply is working properly. 2. Check if the power supply matches the light strip. 3. Check if all connections are good, and use conductive and short wires as much as possible for connection. 4. Add power supply at an appropriate position. 5. Check if the APP has set a limit on brightness or current.

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

 (210)-290-8493

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

 (817)-576-4113

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

 (469)-372-0795



1. Before turning on the power, please ensure that all connections are correct and secure, and do not operate while the power is on.
2. The product should be used under the rated voltage. Using it under excessive or insufficient voltage may cause damage.
3. Do not disassemble the product, as it may cause fire and electric shock.
4. Do not use the product in environments exposed to direct sunlight, moisture, high temperatures, etc.
5. Do not use the product in metal shielded areas or around strong magnetic fields, as this may severely affect the wireless signal transmission of the product.

Disclaimers

1. Our company will update the content of this manual based on the improvement of product functionality. The updates will be displayed in the latest version of this manual, without further notice.
2. Due to our continuous adoption of new technologies, product specifications may change without further notice.
3. This manual is provided for reference and guidance only and does not guarantee complete consistency with the actual product. The actual application should be based on the actual product.
4. The components and accessories described in this manual do not represent the standard configuration of the product. The specific configuration is subject to the packaging.
5. All text, tables, and images in this manual are protected by relevant national laws and may not be used without our permission.
6. This product may be compatible with third-party products, but our company does not take responsibility for compatibility issues or partial loss of functionality caused by changes in third-party products.

GL-C-I-012WLv1.1

Call NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

 **(210)-290-8493**

NORTH RICHLAND HILLS

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

 **(817)-576-4113**

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

 **(469)-372-0795**