



FEATURES

- White housing for white pole, Multiple mounts Available.
- 100-277V or 480V input voltage available.
- Low profile housing with enhanced thermal heat sink.
- 6KV built-in plus 10kV external surge protection
- 50,000hrs Life time.

SUITABLE APPLICATIONS

- Warehouses
- Stadiums
- Factories
- Parking Lots
- Shopping Malls
- Supermarkets
- Logistic Centers
- Auto dealerships

CONSTRUCTION:

Heavy die-cast aluminum alloy housing with white powder-coated finish.

OPTICAL SYSTEM:

High brightness lumileds LED chips.
Special PC lens with TYPE III and TYPE V distribution

WARRANTY:

5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

PERFORMANCE

ELECTRICAL:

Available as 120-277V or 480V input. -20°C to 45°C,

INSTALLATION&MOUNTING:

Adjustable Slip filters, arm mounts or trunion mounts available for easy installation.

CONTROLS&DIMMING

0-10V dimming comes standard.

Model NO	Wattage	BUG	Voltage/CurrentInput			Light Efficiency	Kelvin Options
			120V	277V	480V		
LS-ESBV7E100WAT3A1	100W	B3-U0-G3	0.83A	0.36A	0.20A	140LM/W	3000K/4000K/5000K
LS-ESBV7E150WAT3A1	150W	B3-U0-G3	1.25A	0.54A	0.31A	140LM/W	3000K/4000K/5000K
LS-ESBV7E200WAT3A1	200W	B4-U0-G3	1.66A	0.72A	0.41A	140LM/W	3000K/4000K/5000K
LS-ESBV7E240WAT3A1	240W	B4-U0-G4	2.00A	0.72A	0.41A	140LM/W	3000K/4000K/5000K
LS-ESBV7E300WAT3A1	300W	B4-U0-G4	2.50A	1.08A	0.62A	140LM/W	3000K/4000K/5000K

CALL NOW (888)-977-8737

WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

DALLAS/FORTWORTH

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(210)-290-8493

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795

Optional Mount Bracket:



AM Adjustable Slipfitter



DM Direct Mount




YM Yoke Mount

Optional Functions:



Occupancy sensor options

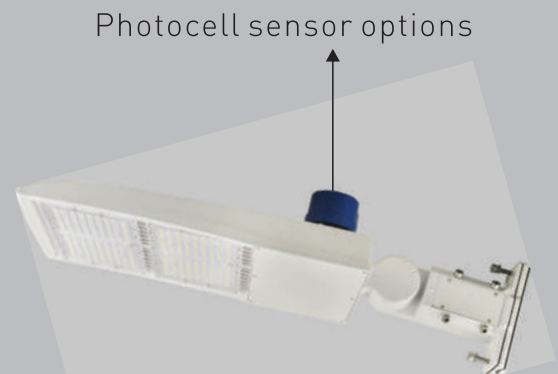

Photocell sensor options

Electric Characteristic

Specification/Model	LS-ESBV7E100WAT3A1	LS-ESBV7E150WAT3A1	LS-ESBV7E200WAT3A1	LS-ESBV7E240WAT3A1	LS-ESBV7E300WAT3A1
LED Driver	UL listed BECKY Brand 0-10V dimmable				
Input power	100W	150W	200W	240W	300W
Lumens output	14000LM	21000LM	28000LM	33600LM	42000LM
Efficiency	140LM/W	140LM/W	140LM/W	140LM/W	140LM/W
CRI	>72	>72	>72	>72	>72
Color Temperature	5000K	5000K	5000K	5000K	5000K
Input voltage	120-277V/AC	120-277V/AC	120-277V/AC	120-277V/AC	120-277V/AC
Light distribution type	TYPE III or TYPE V	TYPE III or TYPE V	TYPE III or TYPE V	TYPE III or TYPE V	TYPE III or TYPE V
Working temperature	-20+45°C	-20+45°C	-20+45°C	-20+45°C	-20+45°C
Junction temperature	<75°C	<75°C	<75°C	<75°C	<75°C
lamps efficiency	≥90%	≥90%	≥90%	≥90%	≥90%
Certificate	UL CUL DLC	UL CUL DLC	UL CUL DLC	UL CUL DLC	UL CUL DLC
Equivalent	200-300W MH/HPS	300-450W MH/HPS	450-600W MH/HPS	600-800W MH/HPS	800-1000W MH/HPS

CALL NOW (888)-977-8737 WWW.SUPERTECHLED.S.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

DALLAS/FORTWORTH

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(210)-290-8493

RICHARDSON


318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795

► Electric Characteristic

Specification/Model	LS-ESBV7150WCT3H1	LS-ESBV7300WCT3H1
LED Driver	UL listed SOSEN LED DRIVER 0-10V dimmable	
Input power	150W	300W
Lumens output	21000LM	42000LM
Efficiency	140LM/W	140LM/W
CRI	>72	>72
Color Temperature	5000K	5000K
Input voltage	277-480V/AC	277-480V/AC
Light distribution type	TYPE III or TYPE V	TYPE III or TYPE V
Working temperature	-20+45°C	-20+45°C
Junction temperature	<75°C	<75°C
lamps efficiency	≥90%	≥90%
Certificate	UL CUL DLC	UL CUL DLC
Equivalent	300-450W MH/HPS	800-1000WMH/HPS

► DIMENSION

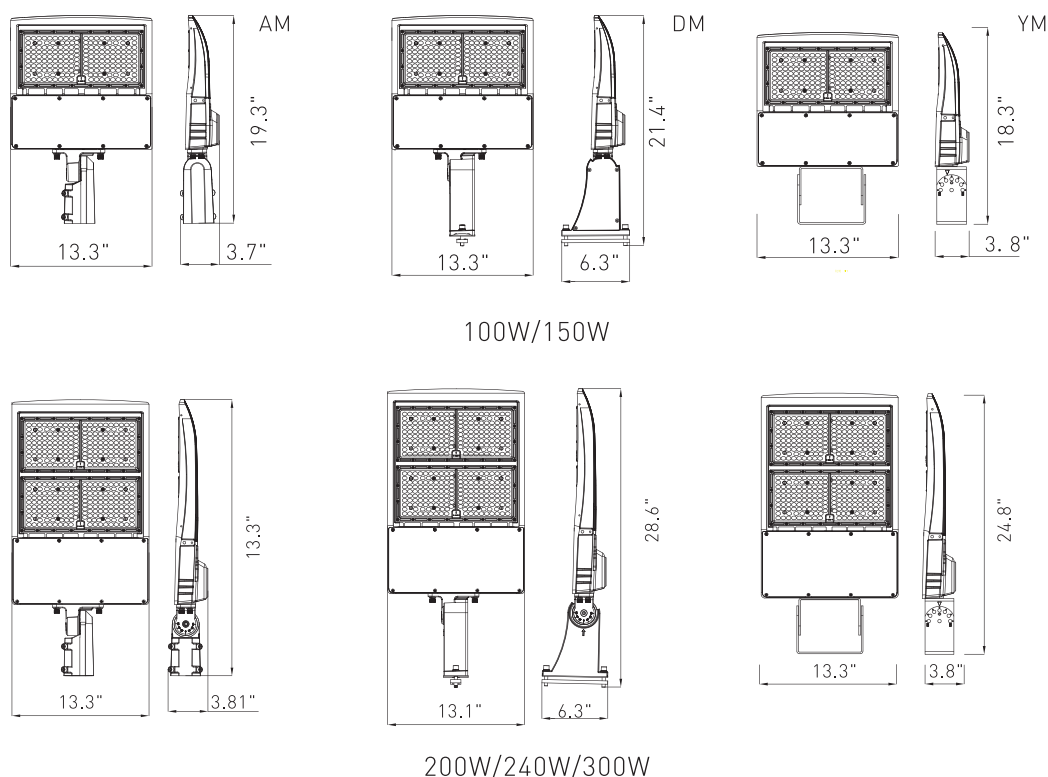

CALL NOW (888)-977-8737 WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

 **(210)-290-8493**

DALLAS/FORTWORTH

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

 **(210)-290-8493**


RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

 **(469)-372-0795**

DISTRIBUTION DIAGRAM

LS-ESBV7E100WAT3A1

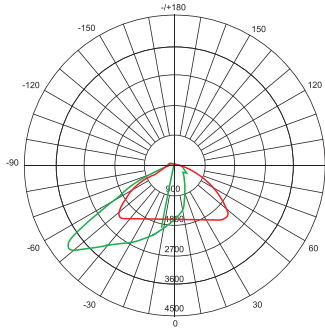


AVERAGE BEAM ANGLE[50%]: 122°

UNIT:CD

Test Number:LS-ESBV7E100WAT3A1
Lumens:14000LM
Test Number:100W
Test Number:5000K

— C0/180,113.7
— C30/210,100.1
— C60/240,108.6
— C90/270,130.9

LS-ESBV7E150WAT3A1

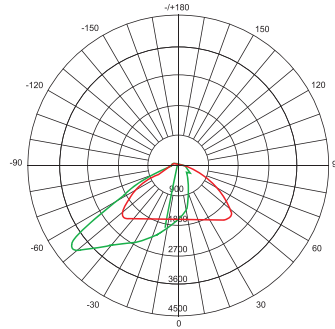


AVERAGE BEAM ANGLE[50%]: 122°

UNIT:CD

Test Number:LS-ESBV7E150WAT3A1
Lumens:21000LM
Test Number:150W
Test Number:5000K

— C0/180,113.7
— C30/210,100.1
— C60/240,108.6
— C90/270,130.9

LS-ESBV7E200WAT3A1

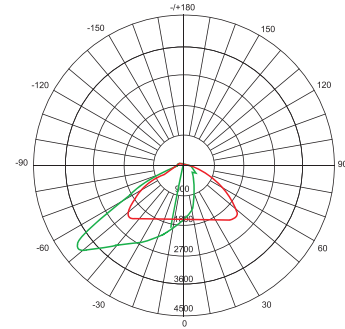


AVERAGE BEAM ANGLE[50%]: 122°

UNIT:CD

Test Number:LS-ESBV7E200WAT3A1
Lumens:28000LM
Test Number:200W
Test Number:5000K

— C0/180,113.7
— C30/210,100.1
— C60/240,108.6
— C90/270,130.9

LS-ESBV7E240WAT3A1

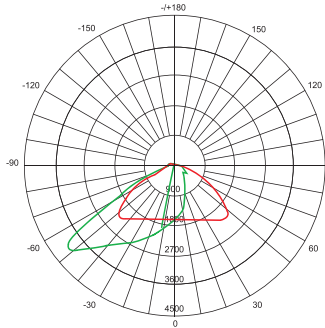


AVERAGE BEAM ANGLE[50%]: 122°

UNIT:CD

Test Number:LS-ESBV7E240WAT3A1
Lumens:33600LM
Test Number:240W
Test Number:5000K

— C0/180,113.7
— C30/210,100.1
— C60/240,108.6
— C90/270,130.9

LS-ESBV7E300WAT3A1

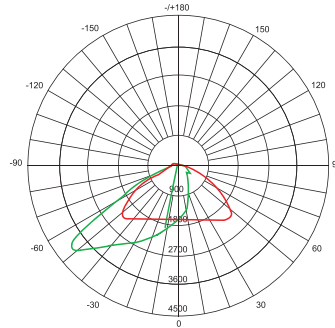

AVERAGE BEAM ANGLE[50%]: 122°

UNIT:CD

Test Number:LS-ESBV7E300WAT3A1
Lumens:42000LM
Test Number:300W
Test Number:5000K

— C0/180,113.7
— C30/210,100.1
— C60/240,108.6
— C90/270,130.9



Installation

1.ADJUSTABLE FITTER MoUNTING (AM)

Step 1:Loosen the four bolts on AM bracket, connect the wires correctly, and pull the wires into the poles.(Figure 1)

Step 2: Place the bracket into the pole and lock the four bolts.(Figure 2)

Notice: Adjustable angle is 0-90°(Figure 1)

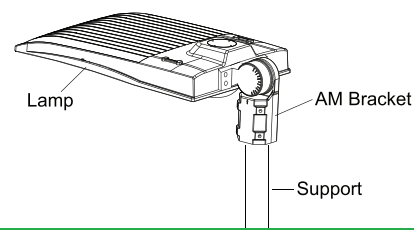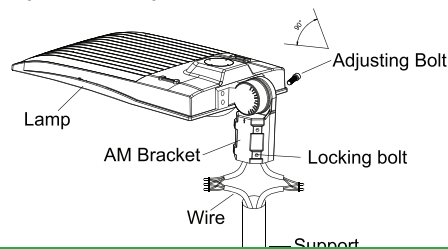

CALL NOW (888)-977-8737

WWW.SUPERTECHLEDS.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

DALLAS/FORTWORTH

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(210)-290-8493

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795

2.DIRECT MOUNTING (DM)

Step 1: Fix DM bracket to square pole with bolt, open the side lid of DM bracket, pull the wire into junction box, and connect the wire correctly. [Figure 3]

Step 2: Put the connected wire into the junction box, then cover the junction box. (Figure 4)

Notice: Adjustable angle is 0-35° (Figure 3).

Same as round pole installation, please remember to remove the silicon plate when install the fixture in round pole (Figure 5)

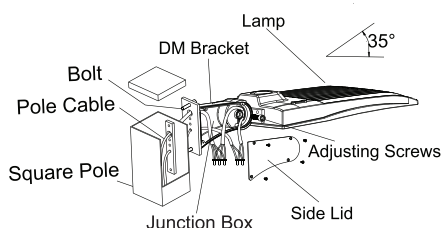


Figure 3

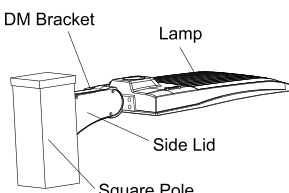


Figure 4

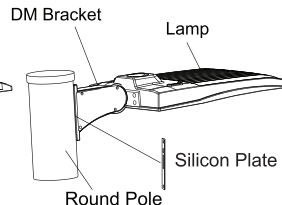


Figure 5

3.YOKE MOUNTING (YM)

Step 1: Drill holes on the wall as shown. (Figure 6)

Step 2: Knock the expansion bolts into the wall. (Figure 7)

Step 3: Connect the fixture to the bracket and tighten the screws; connect the wires properly and put them into junction box. (Figure 8)

Notice: Adjustable angle is 0-90° (Figure 8)

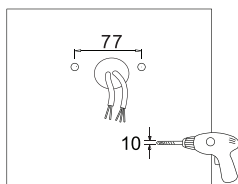


Figure 6

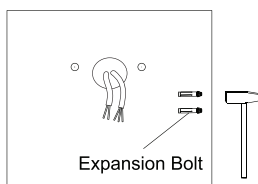


Figure 7

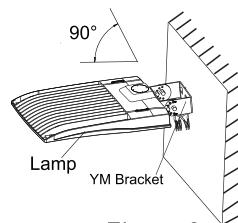


Figure 8

CALL NOW (888)-977-8737 WWW.SUPERTECHLED.S.COM

SAN ANTONIO

3714 Northwest Loop 410,
San Antonio, Texas, 78229.

(210)-290-8493

DALLAS/FORTWORTH

6805 NE Loop 820, Suite#406,
North Richland Hills, Texas, 76180.

(210)-290-8493

RICHARDSON

318 South Central Expressway, STE 113,
Richardson, Texas, 75080, United States.

(469)-372-0795